

USB Handset UTR-UC-1(BK) Installation Guide


NEC Infrontia Corporation

2008.3 Ver:1.0

Wall Mounting


UTR-UC-1(BK) can be installed on the wall by using a wall plate. There are two wall mounting holes on the base of (UTR-UC-1(BK)), To hang the UTR-UC-1(BK), align the holes and slide it on the wall plate.

Remove handset hanger hook and rotate as illustrated below.

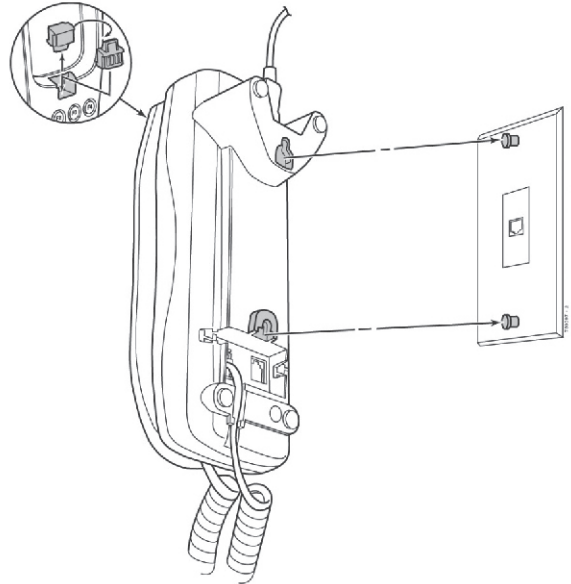


USB Connection

Plug the USB cable (Type A connector) into the back of cradle and Plug USB cable (Type B connector) into your PC's USB port.

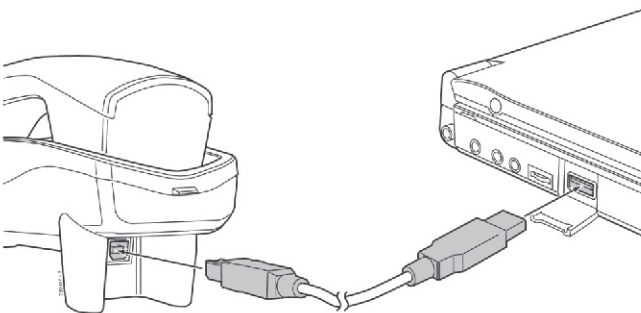

Handset Connection

Plug the handset connector (RJ-11) into the bottom of cradle. Route the handset cable in the handset groove.

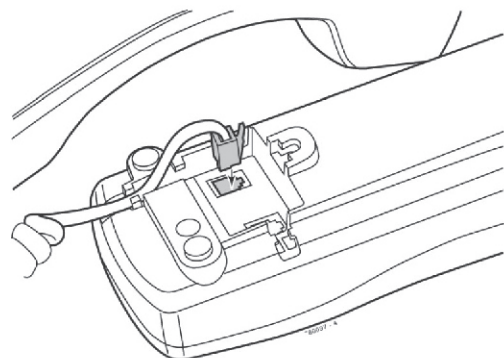


Operating Instruction for UTR-UC-1(BK)

Making calls using Office Communicator

1. Either dial a telephone number or select a person you want to call on Office Communicator. Make a call.
*Please follow the instruction on Office Communicator for the detail operation of how to make a call on Office Communicator.
2. Lift the handset and start talking.
3. Use the volume keys "+" or "-" to control the receiver volume.
4. To hang up, place the handset on the base unit.

Making calls on the handset

1. Lift the handset and dial a phone number on the dial pad.
2. Press  (send)
*With the handset, you can make calls only by dialing a number. Please operate on Office Communicator for dialing from your buddy list or the directory.
3. Use the volume keys "+" or "-" to control the receiver volume.
4. To hang up, place the handset on the base unit.

Receiving calls



Receiving calls

As a call is received, the ringing sound goes off from the speaker and the LED indicator on the base starts to flash. The ringing volume can be either increased or decreased by the volume keys while the handset is placed on the base. Depending on the setting on Office Communicator, the ringing sound may come from the speaker on your PC.

Answering calls

1. Lift the handset to start talking.
*To answer a call while lifting the handset, instantly press the hook button (in less than 0.5 second). If you press the hook button for longer than 0.5 second, the call is disconnected.
2. Use the volume keys to control the receiver volume.
3. To hang up, place the handset on the base unit.

To Mute your conversation

1. Press  (Mute) while talking.
*The LED indicator changes to green when the mute function is on. The other party can not hear your voice but you can still hear voice from the other side.
2. To unmute, press  (Mute) again.

Side light definition

Voicemail:

When you receive voice mails, a red light turns on.

Setting for call forwarding:

When you change the setting to automatic call forward, a green light turns on.

Voicemail and call forwarding:

When you have voicemail while the automatic call forward is set, the light alternately turns red and green.

Notes

1. If you do not hear any voice from the handset after picking up a call, contact your system administrator to check the setting of the Telephony on the User Options.
2. If you do not hear any voice or sound from the handset, make sure "URT-UC" is selected for your voice device under "device setting" in Office Communicator.